



Expansions BD BOARD HV-BCOM

For RS-485 communicate.

For RS-232 communicate..

RS-232 and RS-485 can not be used at the same time.